


FEATURES


PRESENTATION MODE

USB CAPS LOCK OVERRIDE BAR CODE

For detailed information

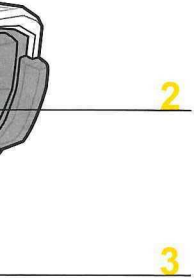

- 1 LED Indicator
- 2 Scan Window
- 3 Scan Trigger

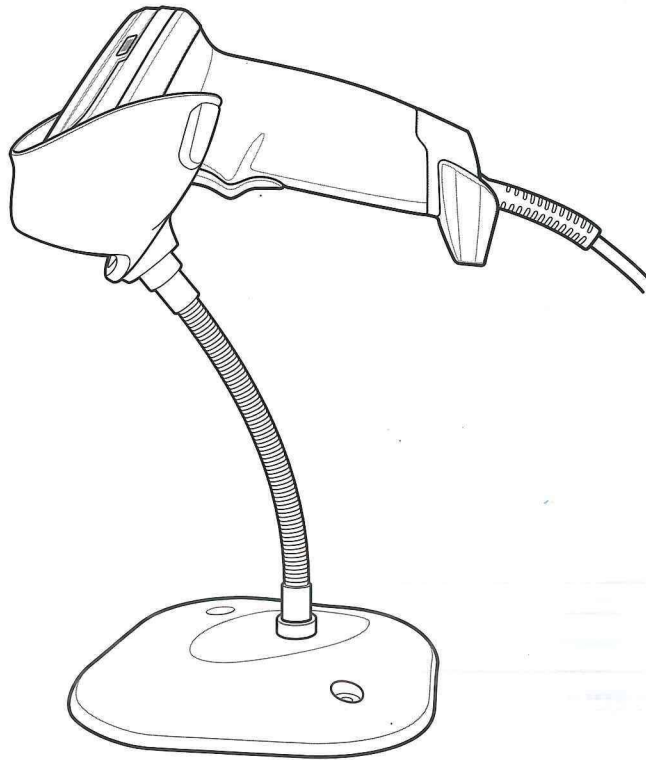

USB - OVERRIDE CAPS LOCK KEY (ENABLE)



*USB - DO NOT OVERRIDE CAPS LOCK KEY (DISABLE)

HOST INTERFACE

STEP 2 - SET UP INTERFACE (Scan Host Bar Codes)

USB

Scan **ONE** of the bar codes below

The digital scanner automatically detects the host interface type and uses the default setting. If the default (*) does not meet your requirements, scan another host bar code below.

